

Wi-Fi Hotspot

Quick Start Guide



ZTE Warp Connect

Get Ready

1. Make sure you are in an area covered by the Sprint network (not roaming).
2. Make sure the device you are trying to connect to your Hotspot has its Wi-Fi (wireless network connection) mode turned on.

Power Up the Hotspot

To turn your Hotspot on or off, press and hold the Power Button on the bottom edge of the device for at least two seconds.

Main Screens

Your Hotspot has a series of screens that let you view device information. Press the Function (FUNC) Button to cycle through the following:

- Mobile Data
- Device Info
- Wi-Fi QR Code
- WPS
- Language
- Roaming

Connect a Device to Your Hotspot via Wi-Fi

1. Turn on your Hotspot and your Wi-Fi enabled device.
2. Open the Wi-Fi Application or controls on the computer or Wi-Fi enabled device that you want to connect to your Hotspot.
3. Find your Hotspot's Wi-Fi name and enter your password to connect to the Internet. To find the Wi-Fi name and password, use the FUNC Button to navigate to "Device Info."

Note: Mobile Data must be connected to get Wi-Fi access. To check the connection, click the FUNC Button and select "Mobile Data." You should be asked if you want to disconnect. Select "No." If you are asked to connect, select "Yes."

Charge the Hotspot Battery

1. Insert the small end of the USB cable into the micro-USB charging port on the top edge of the hotspot.
2. Plug the charging adapter into a standard AC power outlet.

